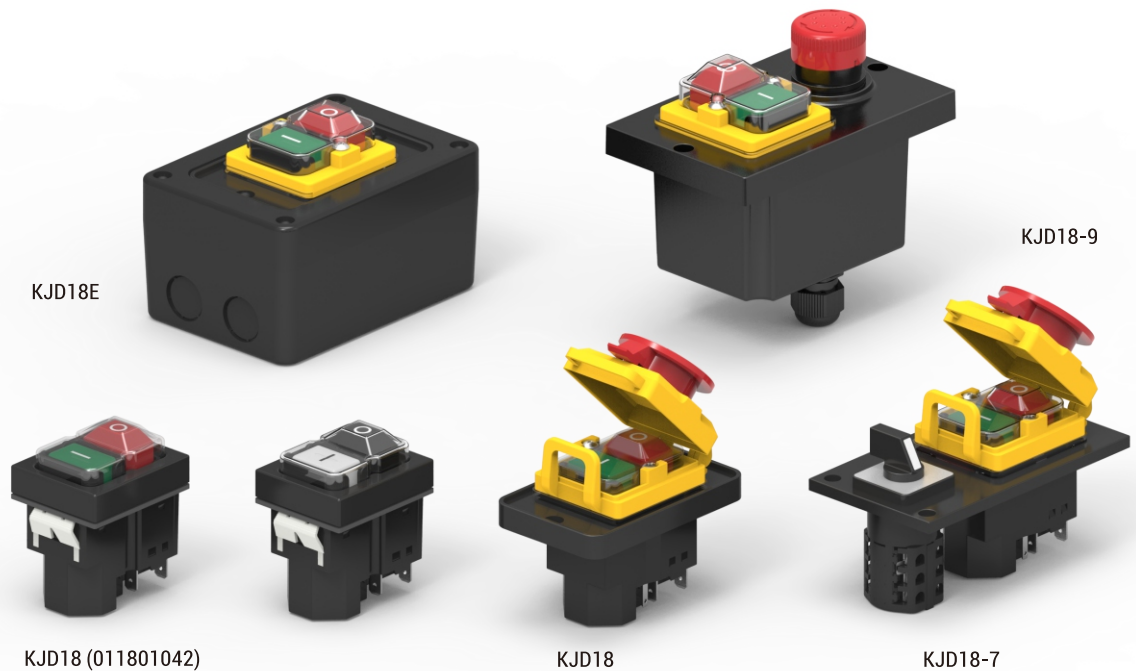


电磁开关

KJD18 Electromagnetic Switch



Description 描述

Switch KJD18 can be used to turn on and control electrical motors as it has under voltage and restart protection. Advanced features include controlling the electrical motor movement and acting as a replacement for a two directional switch.


KJD18开关用于启动和控制电动机，具有欠电压及停电保护功能，并能控制电动机的正反转和替代正反开关的功能。

Specifications 参数















Standard 标准	TUV (EN60947)		TUV (EN61058)	
Rated Voltage 额定电压	400V~		250V~	400V~
Rated Current 额定电流	7.5A (AC-3)	6A (AC-15)	15 (12) A	15 (8) A
Rated Frequency 额定频率	50 / 60Hz			
Degree of Protection 防护等级	IP54			
Number of Operating Cycles 操作循环次数	5E4			
Poles 级数	2-poles or 3-poles 2极或3极			
Terminals 端子	Faston 6.3×0.8mm or Screw terminal 插片6.3×0.8mm或螺纹端子			
Phase 相数	Single phase and Three phase 单相和三相			


电磁开关

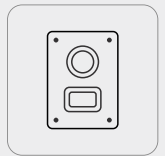KJD18 Electromagnetic Switch



Ordering Options 订货选项

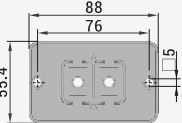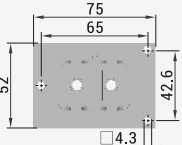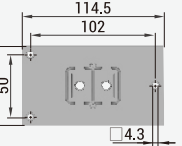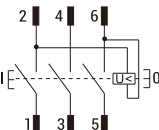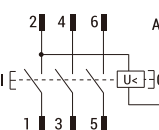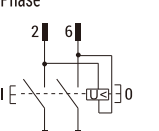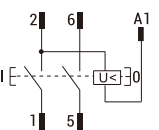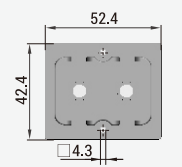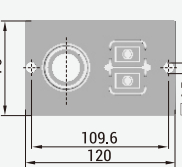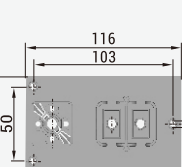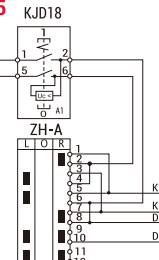Appearance and Panel 外形图和面板	Function 功能	Coil Voltage/Frequency 线圈电压/频率	Marking on Button 按钮标识	Accessories 附件
KJD18 	P1 A01904  P2 A04153  P3 A04152 	F1 Without Remote Trip-Three Phase  F2 With Remote Trip-Three Phase  F3 Without Remote Trip-Single Phase  F4 With Remote Trip-Single Phase 	V1 110-120V~/50Hz V2 110-120V~/60Hz V3 230V~50/60Hz V4 400V~50/60Hz M1   M2   M3   M4   M5   M6  	A1 With Waterproof Cover 防水罩   A2 Rubber Sleeve 橡胶套  A3 Emergency Stop Button and Waterproof Cover 急停按钮和防水罩  PL1  PL12  PL13 
KJD18(011801042) 	P5 A05645 			
KJD18-9 	P6 A01914 			
KJD18-7 	P7 A01913 	F5 KJD18 		









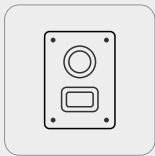


电磁开关

KJD18 Electromagnetic Switch




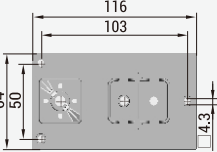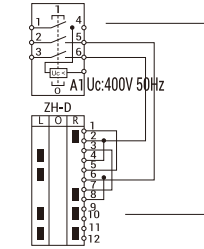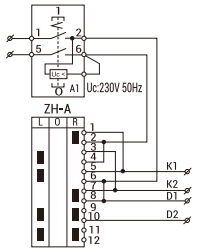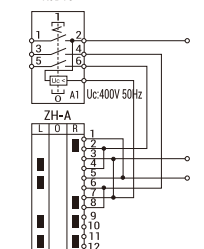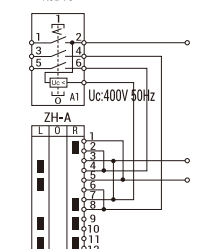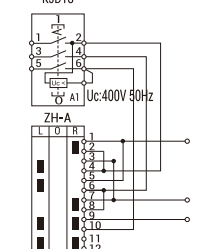Ordering Options 订货选项

Appearance and Panel 外形图和面板	Function 功能	Coil Voltage/Frequency 线圈电压/频率	Marking on Button 按钮标识	Accessories 附件
 KJD18-6  P8 A0191201	F6 	V1 120V~/50Hz V2 120V~/60Hz V3 230V~/50Hz V4 230V~/60Hz V5 240V~/50Hz V6 240V~/60Hz	M1  M2  M3  M4  M5  M6 	A1 With Waterproof Cover 带防水罩    For Emergency Stop Button 急停按钮专用
	F7 			
	F8 			A3 Emergency stop button and Waterproof Cover 急停按钮和防水罩 PL1  PL12  PL13  PL14  PL16 
	F9 			
	F10 			


电磁开关

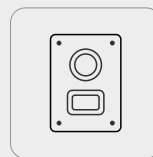KJD18 Electromagnetic Switch




Reference Dimension 参考尺寸

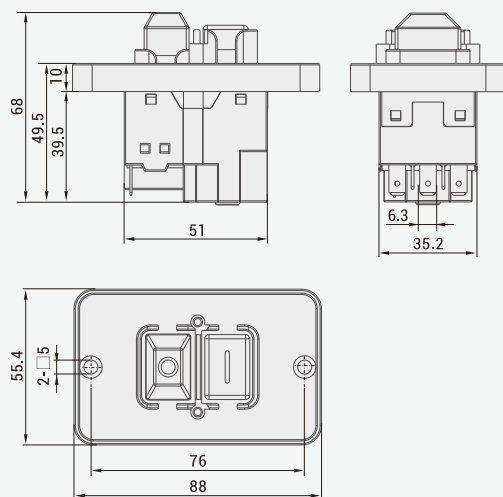
KJD18



KJD18 (011801042)

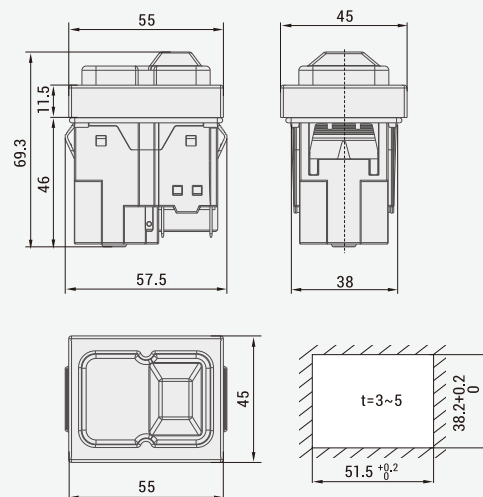

KJD18-6

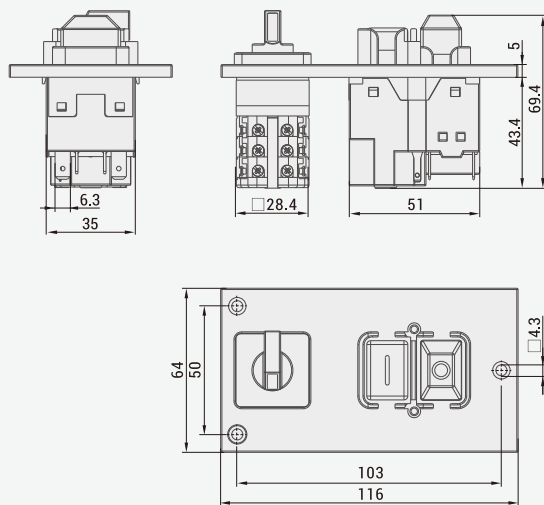

KJD18-7

